

**MAC**



**M10 - M11**

**MAC  
SUBMACHINE  
GUN**



**OPERATING MANUAL**

**No. 1**

**MILITARY ARMAMENT CORP.**

**MARIETTA GA. 30062 U.S.A.**

# **OPERATION AND MAINTENANCE MANUAL**



**MILITARY ARMAMENT CORPORATION**

## TABLE OF CONTENTS

### Foreward

1. Introduction . . . . .	1
A. Technical Specifications	
2. Construction . . . . .	4
3. Operation of the Weapon . . . . .	5
A. Loading Magazines	
B. Stock Assembly	
C. Loading and Cocking the Weapon	
D. Charging the Weapon	
E. Inserting the Magazine	
F. Placing the Weapon on "Safe"	
G. Removal of Magazine	
H. Fire Selector Lever Operation	
I. Firing the Submachine Gun	
J. Malfunctions	
4. Stripping and Reassembling . . . . .	12
A. Field Stripping	
1) Removing Upper Receiver	
2) Removing the Bolt	
3) Removing the Stock	
B. Trigger Mechanism	
C. Extractor	
D. Recoil Spring	
E. Receiver Pin Catch	
F. Magazine Catch	
G. Safety Catch	
H. Stock Latch	
I. Magazine	
5. Reassembly . . . . .	15
6. Cleaning and Maintenance . . . . .	15
Illustrated Parts List . . . . .	17

